




INSTALLATION INSTRUCTIONS


BRAIDED INSTALLATION

1. ATTACH THE FINISHING CLIP AT THE TOP

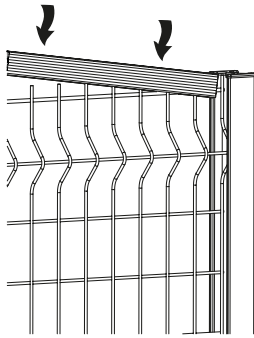


Place the finishing clip at the top of the panel with the flat side facing the folds of the grille.

2. FILL IN THE PANEL

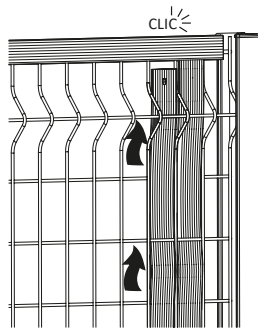

Leave the meshes at the ends of the grid empty, then braid with the widest plates, starting from the bottom and working your way up. Repeat the process until you have filled the grid. Lock your dish in the finishing clip (you should hear a click).


3. FILL THE ENDS

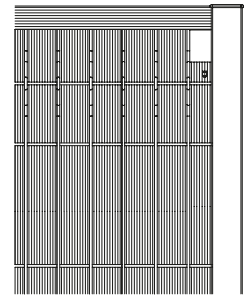

Finally, fill each end with the two finishing profiles.


STRAIGHT INSTALLATION

1. SLIDE THE ANGLES PROFILES INTO THE PLATES

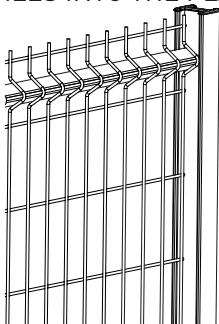


Slide the angle irons up and down.

2. SLIDE THE BLADES of the bank

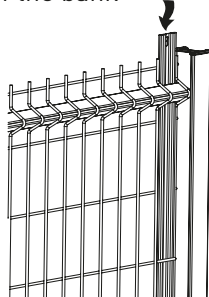


Slide your fascia boards into the first vertical meshes on the left and right.

3. FILL IN THE PANEL

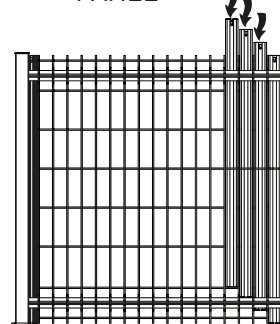

Slide your blades through each mesh until the panel is full.

4. ATTACH THE FINISHING AT THE TOP

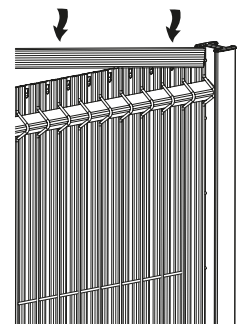

Place the finishing clip at the top of the panel with the flat side facing the folds of the grille to lock your boards in place.

Given the diversity of mesh panels on the market and the unspecified conditions of use of our blackouts, technical validation of the product is the responsibility of the purchaser and user.

For further information, please contact our sales department.